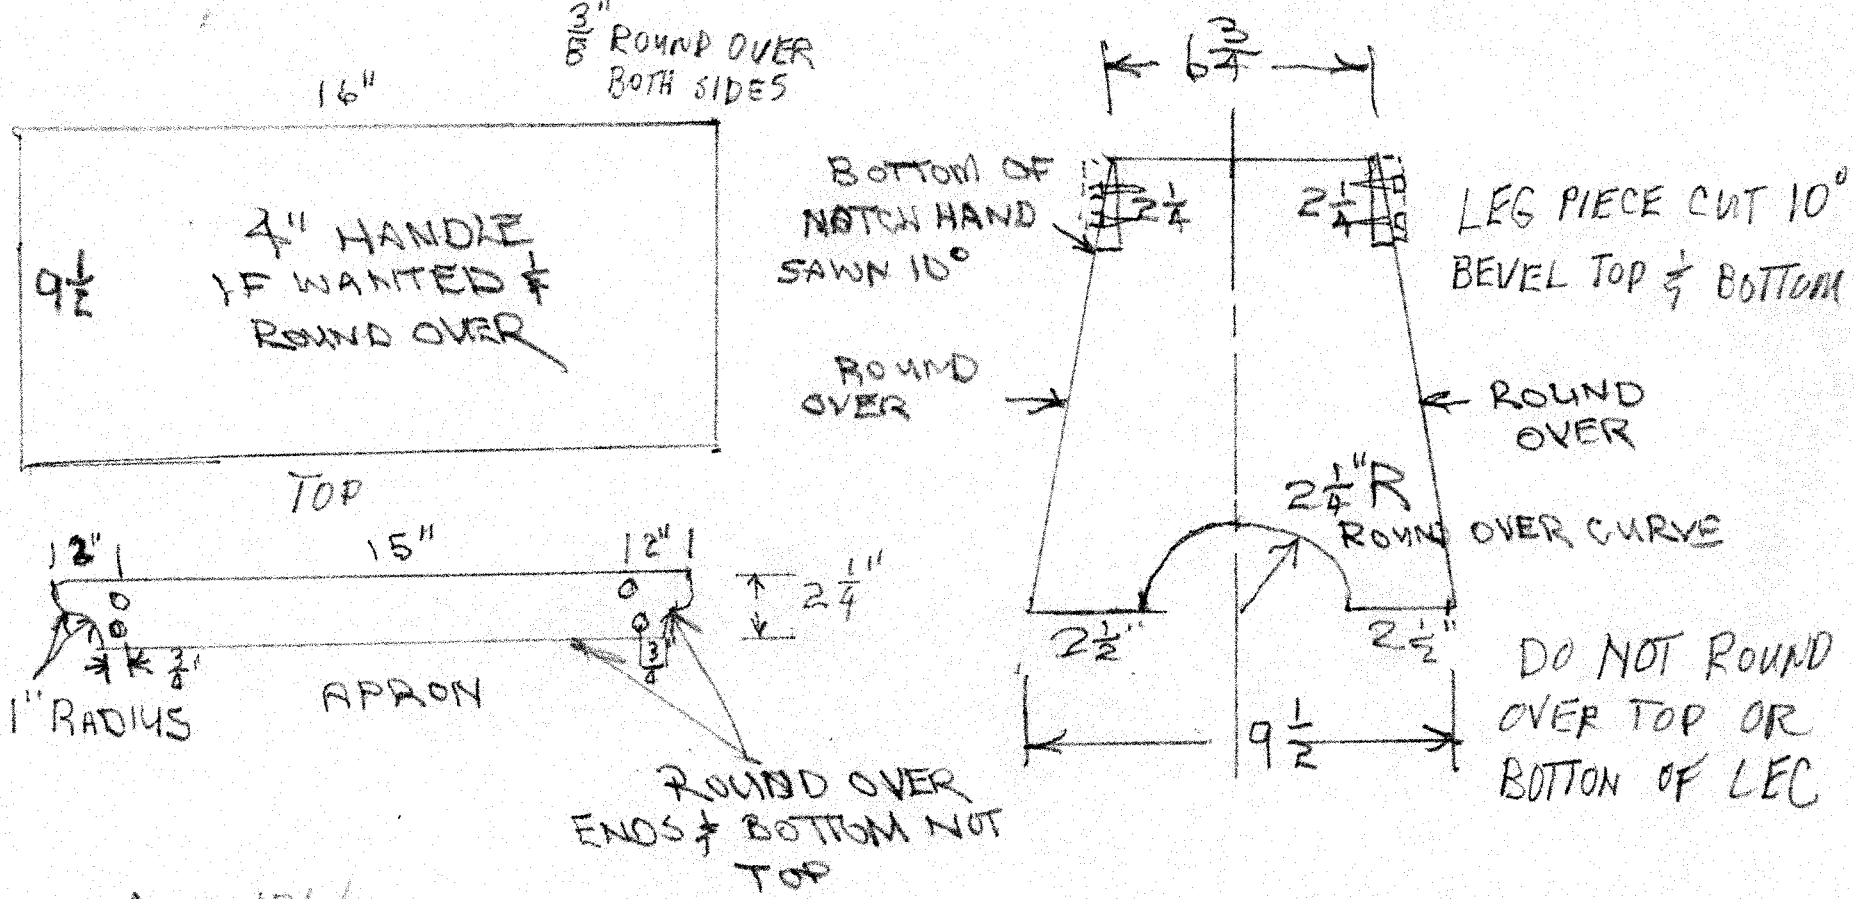

ASSEMBLY

DRILL 2 PLUG HOLES 3/8" TOP ONE 2" FROM END OF APRON BOTTOM ONE 3/4" FROM BOTTOM OF APRON

DRILL SCREW HOLES INTO LEG - GLUE & SCREW IN LEG. (CHECK LEG ANGLE)

GLUE TOP TO LEG & APRON ASSEMBLY & CLAMP ALL ROUND.